CF-83 ALIGNMENT DOWEL SET

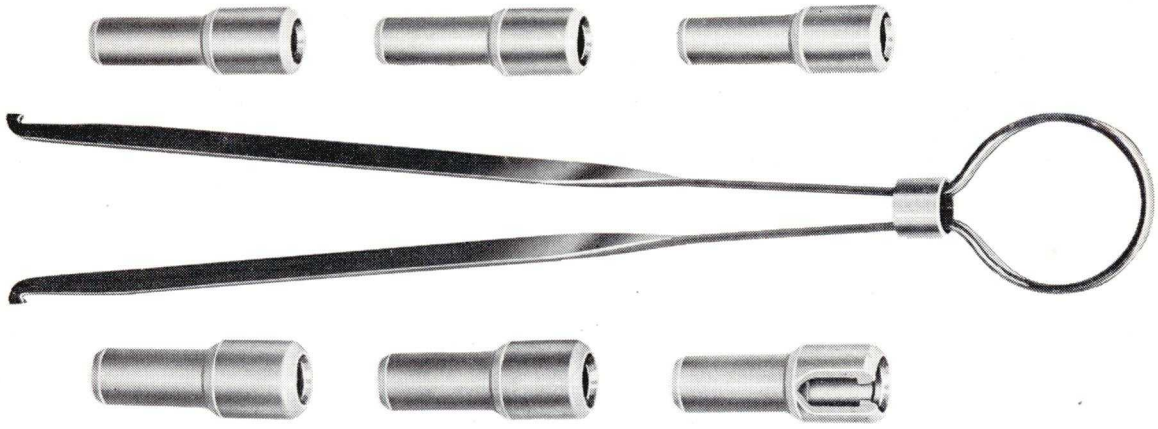

For fast, accurate placement of Head Gaskets and Cylinder Heads. Three dowels placed in the block (shown below) give added protection to the gasket and three-point alignment for block-gasket assembly. Head bolts start easily. The spring activated retriever removes the dowels without unscrewing.

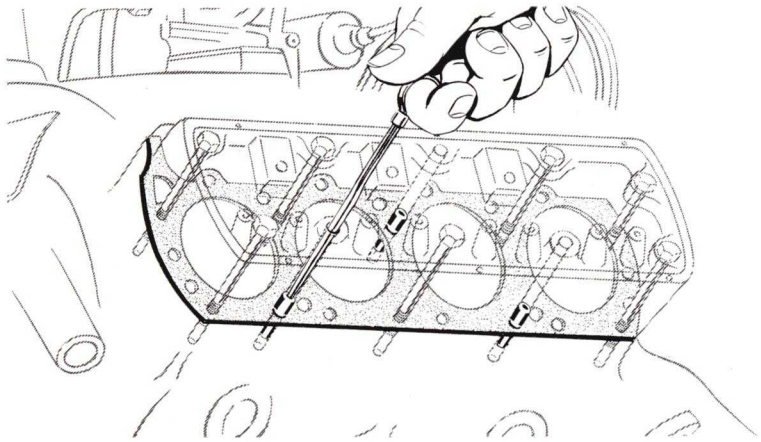

Set consists of:

CF-83-1
1 spring steel retriever

CF-83-2
1 Set of three dowels,
7/16" bolt size

CF-83-3
1 Set of three dowels,
1/2" bolt size

The larger portion of each dowel slides easily through the head bolt holes—the smaller portion is a slip fit into the threaded holes in the block—perfect action every time.

This set should be used particularly by those mechanics who use fast drying sealants on the head gasket. The dowels permit placement of gasket and head before the sealant can dry, without danger of deforming the gasket or need to slide the gasket or head back into place. Just drop the dowels into place, two below and one above, lay the gasket over them and set the head in place. Then start, but *do not tighten* head bolts in all other holes. Finally, use the retriever to pull the dowels and start remaining bolts. Tighten as usual.

Lisle Corporation, Clarinda, Iowa, U. S. A.

PAT. PEND. 7-1959 Printed in U.S.A.